

Manual Mastic Removal ACCESSORIES

Being prepared for the tough job of mastic removal will save time, money and help with efficiency of your task.

STEP-BY-STEP GUIDE TO THE TOOLS YOU NEED FOR YOUR MASTIC REMOVAL

1.
Step

1. Remove the floor tile (SPUD BAR).



Spud Bar Tile Popper - #TT0123

For those really difficult hand stripping jobs, here is a real heavyweight floor scraper with terrific leverage and a long life. Featuring an all steel bar and replaceable spring steel blades and a comfortable shovel handle.

Spud Bar Blades



3.5" Blade - #TT0125
(sold as each)



6" Blade - #TT0127
(sold as each)

2.
Step

2. Prepare the work area by protecting walls, drains, cracks, carpeting, woodwork and anything else that may come into contact with the mastic remover solvent. Use (RAGS) or absorbent such as (MASTASORB)

MastaSorb

This fiberized wood based product absorbs up to 15 times its weight which allows a bale to solidify between 2000 and 2500 square feet of liquid mastic clean up.



CHM0150 MastaSorb

Vacuum-Packed Colored Rags

A very large bag of rags vacuum-packed bags to ensure you get a large quantity of rags per bag. The rags are recycled clothing and are generally quite strong making them ideal for cleaning mastic.



MS1010 10 lbs.
MS1025 25 lbs.

3.
Step

3. Define a workable area. Apply MASTIC REMOVER to the defined work area saturating the mastic. Allow the solvent to soak into the mastic.

Offering varying strength and odors, The Safetyhouse.com's PowerChem Mastic Removers will help your project go smoothly.

All of theSafetyhouse.com's powerful mastic removers are also available in 55 gallon drums.

POWERCHEM



CHM3250	PowerChem 325 Low Odor Mastic Remover
CHM3350	PowerChem 335 Low Odor Plus Mastic Remover
CHM3750	PowerChem 375 No Odor Mastic Remover
CHM3950	PowerChem 395 Extreme Mastic Remover
CHM3200	PowerChem 320 Soy Mastic Remover
CHM3500	PowerChem 350 Citrus Blend Mastic Remover

Manual Mastic Removal ACCESSORIES

4.
Step

4. Agitate the product with a stiff BRISTLED PUSH BROOM or BRUSH until the mastic becomes liquefied.

Wooden Push Brooms

Black plastic bristles, great for wet or dry sweeping.

24' TT0017
18' TT0017B



Carbon Steel Brush Broom

Asphalt and concrete before blacktopping.

3 1/2" L, 16" WTT0046



Wooden Handles



Standard threaded and tapered handles. Lacquer finish.

Threaded. TT0112
Tapered. TT0111

Push Palmyra Brooms

For use on driveways and floor sweeping. Tough and long-lasting.

4" L, 18" WTT0017A



Heavy Duty 10" Deck Brush

TT6100



5.
Step

5. Push or SQUEEGEE the liquefied mastic to the next work area, add more solvent and repeat the procedure.

18" Floor Rubber Squeegee
TT0130

18" Floor Foam Squeegee
TT0132



6. To collect the liquefied mastics, apply absorbents like MastaSorb and scrape or squeegee the material into piles. Pick up the waste with PLASTIC or NON-SPARKING SHOVELS and contain in properly marked DISPOSAL BAGS.

Shovel With Wood Handle

Plastic Scoop
TT0135



Black ACM Printed Bags


Size	Industrial (3.5 MIL)	Full Weight	6 MIL SPEC
30"x40"	BA999 100/case	BA1017 100/roll	BA1016 75/case
33"x50"	BA998 75/case	BA1002 75/case	BA1025 75/case
33"x50"	BA1011 100/roll	BA1002R 75/roll	BA1026 75/roll
36"x60"	BA1012 50/roll	BA1020 50/roll	BA1028 50/case



6.
Step

7.
Step

7. Once the adhesives have been satisfactorily removed, mop the area with POWERCHEM HEAVY DUTY CLEANER to remove the residue and rinse with water. More porous surfaces will likely require extra effort to ensure that all of the solvent is emulsified and all residual product is removed.

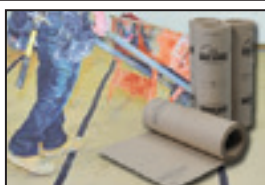

Ram Board
MS0300

Protect that newly clean floor with Ram Board, a heavy-duty, temporary floor protection engineered for Contractors. Designed with cost and efficiency in mind; it lays out fast and is re-usable. It provides the perfect solution when protecting new or existing concrete, wood, tile, stone, linoleum, vinyl composition tile (vct), epoxy, and most other floor types.

PowerChem 222 Heavy Duty Cleaner

#CHC0222

